


# Puller Sets


## MANUAL

**10 & 17½ Ton**

## BEARING MAINTENANCE

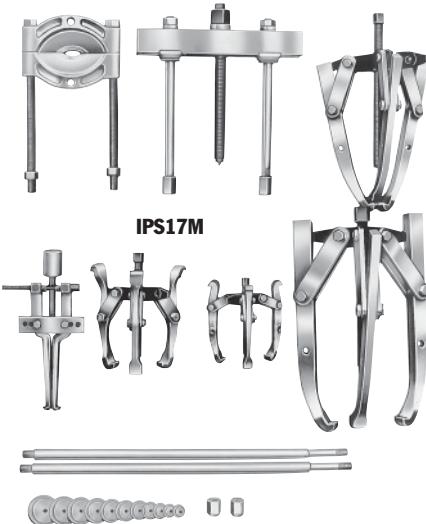

**10 ton manual puller set** – This puller set is just what you need for removing gears, bearings, etc. Includes pullers, attachments, and many accessories.

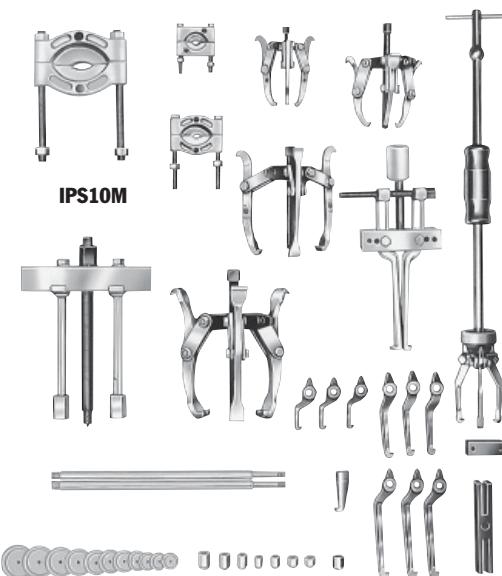

**17½ ton manual puller set** – The pullers and accessories in this set can be used for hundreds of applications including quick and easy maintenance involving removal and replacement of press-fit parts.

Manual Puller Set No. Order No.	Set Contents	Pullers	Set Contents	Accessories
<b>IPS10M</b> 10 ton capacity Wt., 24 kg.	<b>927</b> 10 ton capacity Push-Puller® with 171 mm legs <b>1023</b> 2 ton combination 2/3-jaw puller <b>1026</b> 5 ton combination 2/3-jaw puller <b>1027</b> 5 ton combination 2/3-jaw puller <b>1037</b> 7 ton combination 2/3-jaw puller <b>1178</b> Slide hammer set		<b>8075</b> Step plate adapter set <b>8044</b> Female threaded adapter set <b>8035</b> Female threaded adapter: $\frac{1}{2}$ "–20 x $\frac{5}{8}$ "–18 <b>1151</b> Bearing cup pulling attachment <b>1121</b> Bearing pulling attachment <b>1122</b> Bearing pulling attachment <b>1123</b> Bearing pulling attachment <b>1101</b> 400 mm long puller legs for 927 (pr.)	
<b>IPS17M</b> 17½ ton capacity Wt., 52,7 kg.	<b>938</b> 17½ ton capacity Push-Puller® with 241 mm legs <b>1027</b> 5 ton combo 2/3-jaw puller, with long jaws <b>1037</b> 7 ton combination 2/3-jaw puller <b>1041</b> 13 ton combination 2/3 jaw puller <b>1045</b> 17½ ton 3-jaw puller		<b>8075</b> Step plate adapter set <b>1105</b> 572 mm legs for 938 <b>1130</b> Bearing pulling attachment <b>1151</b> Bearing cup pulling attachment <b>8038</b> Female adapter: $\frac{5}{8}$ "–18 F. x $\frac{3}{4}$ "–16 F. (2)	

**Note:** Storing boards must be ordered separately.

**No. DB10M** – Board for storing IPS10M set. Size 9,5 x 900 x 1200 mm high. Wt., 10,9 kg.

**No. DB17M** – Board for storing IPS17M set. Size 9,5 x 900 x 1200 mm high. Wt., 11,4 kg.